


# BT Business DECT Handset Guide

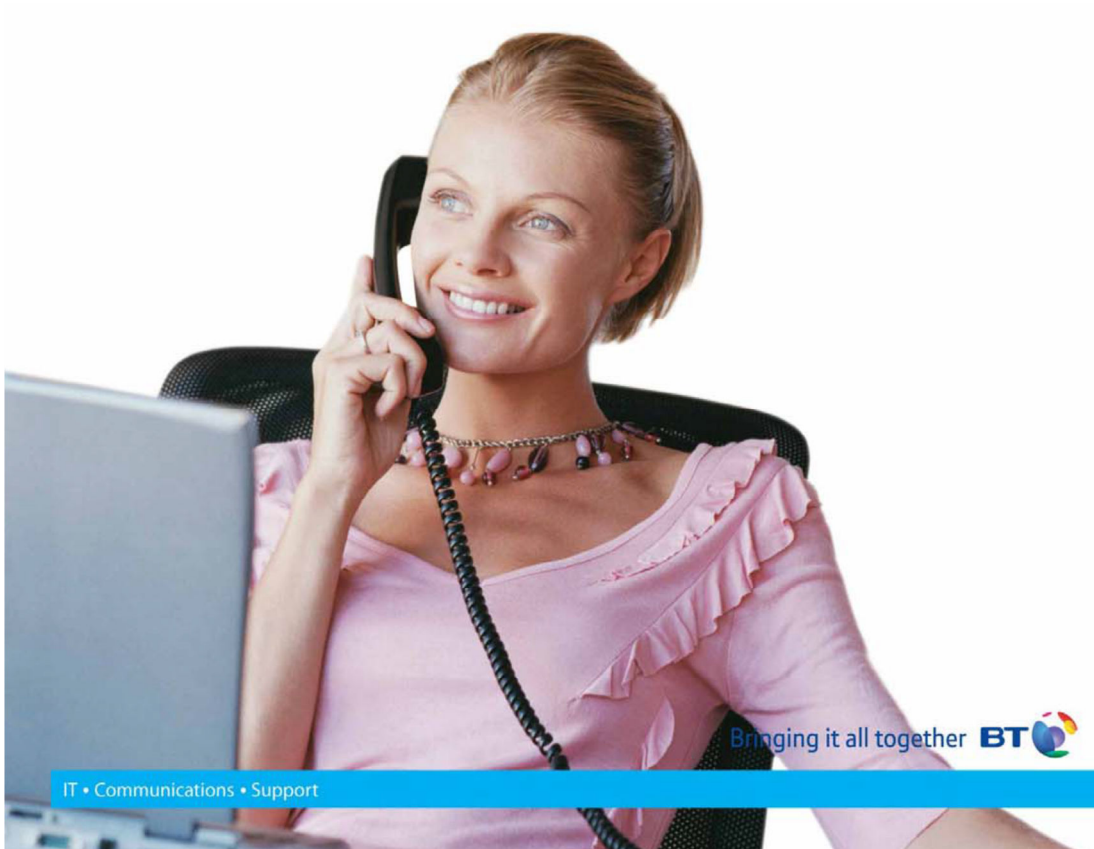

# Contents

<b>Contents</b> .....	2
1 About This Document.....	5
1.1 Audience.....	5
1.2 Abbreviations.....	5
1.3 References/Related Documentations.....	5
2 Making Handset Ready.....	6
3 Phone Overview.....	8
3.1 Handset – Front View.....	8
3.2 Rear View - Handset.....	9
4 Display.....	10
4.1 Icons and Text in the Display.....	10
4.2 Menu icons.....	11
4.3 Keys and Buttons.....	12
4.3.1 Navigation Keys/Selection Key.....	12
4.3.2 Softkeys.....	12
4.3.3 Speaker Key.....	12
4.3.4 Activity Menu Key.....	12
4.3.5 Off-hook Key.....	12
4.3.6 On-hook, and On/Off Key.....	13
4.3.7 Speed Dial Keys.....	13
4.3.8 Volume Button.....	13
4.3.9 Mute Button.....	13
4.4 The Keypad.....	14
4.4.1 Idle Mode, and Number Input Mode.....	14
4.4.2 In Text Input Mode.....	14
4.4.3 Silent Mode from #-Key.....	14
5 Basic Operation.....	15
5.1 How to Switch the Handset On/Off.....	15
5.2 Lock/Unlock the Keypad.....	15
5.3 Entering a number in idle.....	15
6 Menu Operation.....	16
6.1 Contacts.....	17
6.1.1 Add Contact.....	17
6.1.2 Call/Edit a Contact.....	18
6.1.3 More Contacts Options.....	18
6.1.4 Speed dial/One Touch Dial.....	19
6.2 Central Directory.....	20
6.2.1 LDAP Mode and Local Mode.....	20
6.2.2 Calling a Contact in the Central Directory.....	22

6.2.3 Line .....	22
6.3 Calls.....	23
6.3.1 Call .....	24
6.3.2 View .....	25
6.3.3 More Calls Options.....	25
6.4 Connectivity .....	26
6.4.1 Register .....	26
6.4.2 Deregister .....	27
6.4.3 Select Network.....	28
6.5 Settings .....	28
6.5.1 Time & Date .....	29
6.5.2 Language.....	29
6.5.3 LED Signal.....	30
6.5.4 Power Save .....	31
6.5.5 Security .....	31
6.5.6 Handset Name, Line, Reset Settings, Status.....	32
6.5.7 Auto Answer .....	35
6.5.8 Silent Charging .....	35
6.5.9 Do Not Disturb .....	36
6.5.10 Hide Number.....	36
6.5.11 Call Forward .....	38
6.5.12 Idle Screen Saver.....	39
6.6 Audio Settings.....	40
6.6.1 Ring Volume and Ring Melody .....	40
6.6.2 Alert Volume and Alert Tone .....	41
6.6.3 Vibrator.....	43
6.6.4 Key Sound .....	43
6.6.5 Confirmation Sound .....	44
6.6.6 Coverage Warning .....	44
6.6.7 Charger Warning.....	45
6.7 Alarms.....	45
6.8 F-Keys.....	47
7 Calls Operations.....	49
7.1 Incoming call.....	49
7.1.1 Answering an Incoming Call .....	49
7.1.2 Reject an Incoming Call.....	49
7.1.3 Silencing an Incoming Call.....	50
7.1.4 Ending a Call.....	50
7.2 Initiating a Call .....	50
7.2.1 Initiating a Call from Idle.....	50
7.2.2 Initiating a Call from Contacts.....	51
7.2.3 Initiating a Call from Calls .....	51
7.2.4 Initiating a Call from the Central Directory .....	51
7.3 Call Holding/Retrieving .....	52
7.4 Attended and Unattended Transfer of a Call .....	53
7.4.1 Attended Transfer.....	53
7.4.2 Unattended Transfer.....	54
7.5 Swap between Two Calls .....	55

7.6 Call Waiting.....	56
7.7 Conference Call.....	57
7.7.1 Establishing a Conference Call .....	57
7.7.2 Terminating a Conference Call .....	58
8 Accessories .....	59
9 Troubleshooting.....	60
9.1 Operational problems.....	60

---

# 1 About This Document

This document describes the features and functionalities available in the BT Business DECT Handset. We describe how to operate the handset without going into details of its mechanical features.

## 1.1 Audience

This guide is intended for everyday users as well as system administrators.

## 1.2 Abbreviations

For the purpose of this document, the following abbreviations hold:

DECT:	Digital Enhanced Cordless Telecommunications
IPEI:	International Portable Equipment Identity
MAC:	Media Access Control
PBX:	Private Branch Exchange

## 1.3 References/Related Documentations

[1]: BT Business DECT Multi-Cell System Guide

[2]: BT Business DECT Single-Cell System Guide

---

## 2 Making Handset Ready


We briefly describe how to prepare the handset for use, install, insert and charge new batteries.

### Package – Contents

#### Contents of Package:

Make sure all relevant components are available in the package before proceeding to the next step. Every shipped handset unit package/box contains the following items:

- 1 x Handset hook
- 1 x A/C Adaptor (Ten Pau S008CM0550060)
- 1 x Rechargeable Battery (Lithium-Ion battery 3.7V, 1100mAh)
- 1 x Charger
- 1 x Handset Unit, 1 x Battery cover

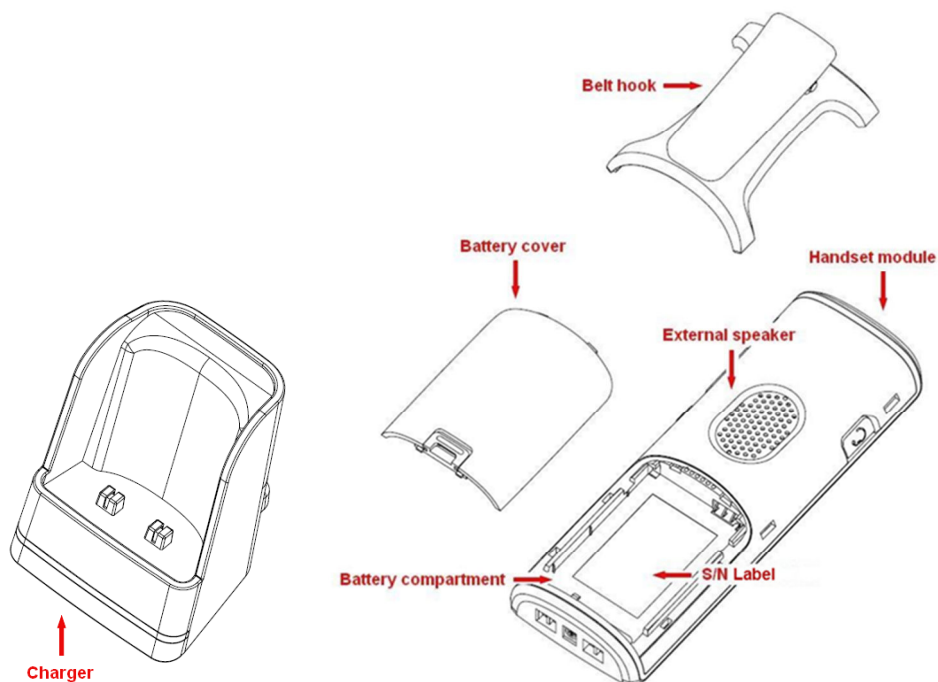

#### Before Using the Phone

Here are the pre-cautions users should read before using the Handset:

#### Installing the Battery

1. Never dispose battery in fires, otherwise it will explode.
2. Never replace the batteries in potentially explosive environments, e.g. close to inflammable liquids/ gases.
3. ONLY use approved batteries and chargers from the vendor or operator.
4. Do not disassemble, customise or short circuit the battery

#### Using the Charger

Each handset is charged through the use of a handset charger. The charger is a compact desktop unit designed to charge and automatically maintain the correct battery charge levels and voltage.

The charger Handset is powered by AC supply from 110-240VAC that supplies 5.5VDC at 600mA. When charging the battery for the first time, it is necessary to leave the handset in the charger for at least 10 hours before the battery is fully charged and the handset ready for use.

### Handset in the Charger


For correct charging, ensure that the room temperature is between 0°C and 25°C/32°F and 77°F. Do not place the handset in direct sunlight. The battery has a built-in heat sensor which will stop charging if the battery temperature is too high.

If the handset is turned off when placed in charger, only the LED indicates the charging. When handset is turned off, the LED flashes at a low frequency while charging and lights constantly when the charging is finished. There will be response for incoming calls.

If the handset is turned on when charging, the display shows the charging status.


### Open Back Cover

1. Press down the back cover and slide it towards the bottom of the handset.
2. Remove Back Cover from Handset

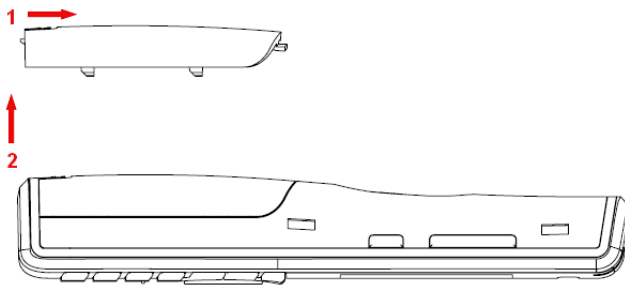

### Handset Serial Number

The serial number of each handset is found either on a label, which is placed behind the battery, or on the packaging label. First, lift off handset back cover and lift the battery and read the serial number.

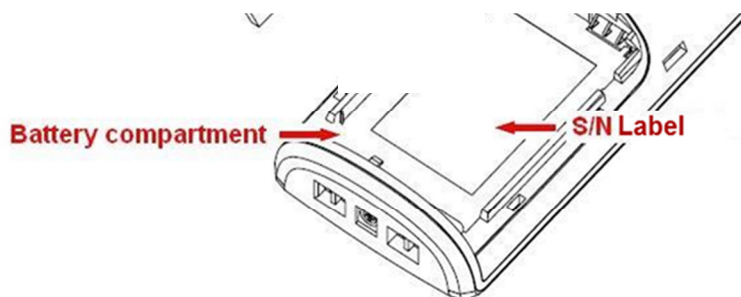

### Replace Battery

Remove Back Cover from Handset. Remove the old battery and replace with a new one.


---

## 3 Phone Overview

This section contains an overview of the handset from a front and a rear view.

### 3.1 Handset – Front View


1. **Earpiece Speaker**
2. **Screen**
3. **Navigation Keys (Up/Down/Right/left)**
4. **Selection Key (Centre of Navigation Keys)**
5. **Call Key/ Accept Call Key (Off-hook key)**  
To answer a call, and functions as a short cut to the Call list.
6. **End, ON/OFF Key, Back Key (On-hook key)**  
To end call, to return to a previous menu, and to switch the handset on/off by long press.
7. **Activity Menu Key**  
To enter all the menus available on the handset.
8. **Speaker Key**  
To enable/disable speaker mode during call.
9. **3 Softkeys**  
Are used for different commands in the different menus on the handset, and changes according to what is displayed on the screen.
10. **LED**  
Indicates incoming call, missed call, messaging, low battery, and charging.

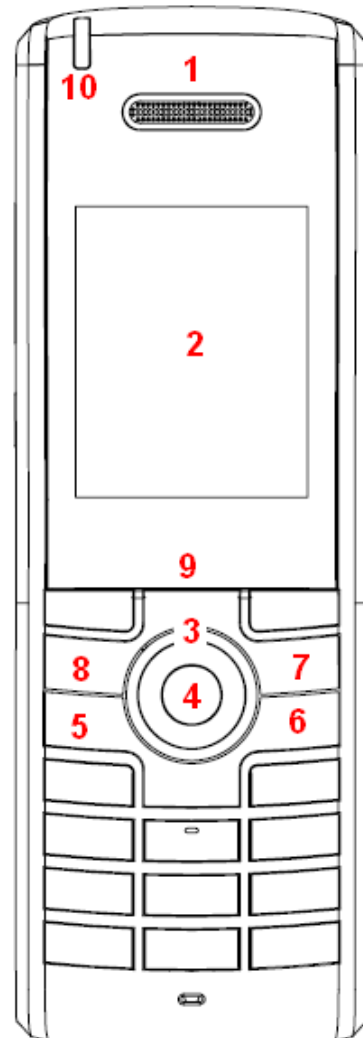



## 3.2 Rear View - Handset

- 11. Headset connector (3.5mm)**  
This is for connecting a headset. The connector is protected against dust by the headset connector cover.
- 12. Volume Up Key (Side Key)**  
To increase the volume during call.
- 13. Volume Down Key (Side Key)**  
To decrease the volume during call.
- 14. Mute Key (Side Key)**  
To turn off the microphone in call, so that the counterpart is muted.
- 15. External Speaker**  
Is used when speaker mode is enabled in call.
- 16. Battery**
- 17. Strap Hole**  
To attach a belt hook, so that the handset can be attached to a pocket, belt, or similar.

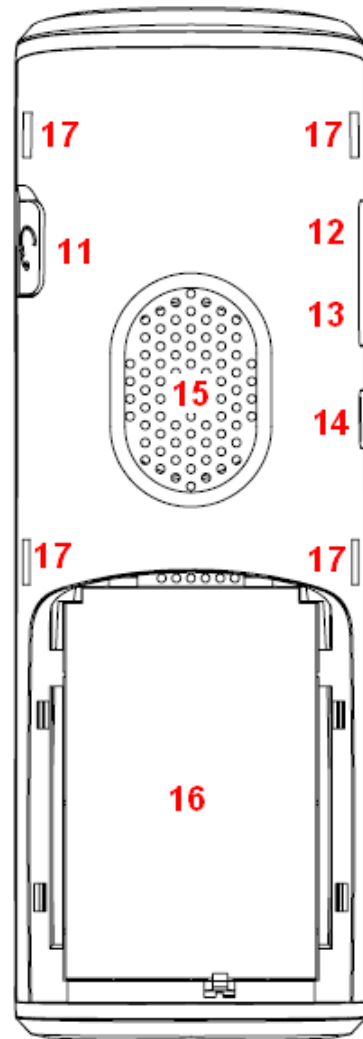

---

## 4 Display

This section contains a description of the different icons seen in the idle and in the menu.

### 4.1 Icons and Text in the Display


All functions and settings available to the handset user are shown as icons and text in the display. The icons and text in the display indicate functions and settings to which you have access.


The picture below shows a typical idle screen that displays the time and date, display name which is set on the web interface of the base station, registration number, and handset name which is set locally on the handset. This active area is also the area for dialog window text if there has been a missed call, or an action needs to be confirmed.




In the softkey bar at the bottom of the idle screen it is possible to access from the left: Contacts, Central Directory, and Calls.

The status bar at the top of the idle screen is always visible in all screens. This displays icons which give the user information about signal strength, missed call, new message, phone lock, key lock, sound off, time, and battery status. These icons are shown and explained shortly in the following:


 "Signal strength" icon is always visible in the upper left corner. The number of green staples is displayed according to the strength of the signal.


 "Battery" icon is always visible in the upper right corner, and shows how much battery that is left on the handset.


 "Full battery" icon is displayed when the handset is fully charged.


 This battery icon is displayed when there is 20% to 32% battery left on the handset.


 "Low battery" icon is displayed when there is 10% to 20% battery left on the handset.


 "Missed call" icon is displayed in the status bar, and indicates that there has been a missed call which can be seen in the call list.


 "Voice mail message" icon is displayed in the status bar when there are voice mails that have not been listened to. This icon remains until the voice mail has been listened to.

 “Alarm” icon is displayed in the status bar and indicates that an alarm has been set on the handset.

 “Sound off”/“Silent” icon is displayed in the status bar when silent mode is enabled on the handset.


 “Keylock” icon indicates when the keypad is locked, and the user needs to long press the \*-key to be able to use the handset again.

 “Do not disturb” icon is displayed in the status bar when this feature is enabled; in this case the handset does not react on any incoming calls.

 “HD” icon is displayed during a call if the quality of the call is “High Definition” and hereby using the 722 codec (also called a wideband call).

## 4.2 Menu icons

All the menus available on the handset are displayed when the menu key is pressed from idle. The available menus are seen in the screen below.

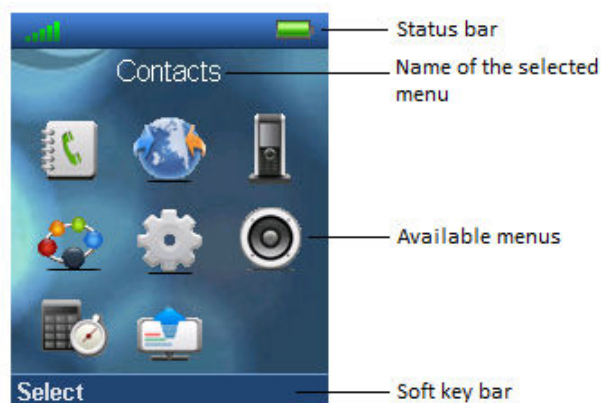

The status bar at the top of the display is always displayed independent of which menu is selected, and the softkey bar gives the possible options to select in every menu. In the active area of the screen the name of the menu selected is displayed at top, and all the available menus to select are displayed. During navigation across the different menus the highlighted icon is moving to indicate where the navigation key is. The menu icons are showed and shortly explained in the following:



The “Contacts” menu contains all names/numbers in the local phonebook.



The “Central directory” menu contains all names/numbers in the central directory of the system. This is set up in the web interface of the base system (see the additional base station manual document for further information on this via [1])



The “Calls” menu contains call lists and call times.



The “Connectivity” menu contains options to register/deregister the handset and network options.



The “Settings” menu contains personal handset settings such as time/date, language, handset name, etc.



The “Audio settings” menu contains personal handset settings for the audio profile such as ring volume, ring melody, etc.



The “Alarms” menu contains personal handset settings for the alarm.




The “F-Keys” menu contains personal handset settings for the F-Keys.


## 4.3 Keys and Buttons

### 4.3.1 Navigation Keys/Selection Key


Use this key when navigating in menus, and to move the cursor when writing some text or a number.

The navigation keys  are used for stepping left/right and up/down when navigating in the menus. When selecting or entering a menu use the selection key in the middle of the navigation keys.


### 4.3.2 Softkeys

The handset has three softkeys  located just beneath the display, and the function of these is indicated by text in the display just above each softkey according to the respective screen.


### 4.3.3 Speaker Key

The speaker key  is used to shift between speaker mode and normal mode during call. When the handset is set to speaker mode during call the speaker key lights up in red, and the sound comes from the speaker on the back of the handset.


### 4.3.4 Activity Menu Key

When using this key  from idle the activity menu is opened from which all the different menus available on the handset can be opened.

### 4.3.5 Off-hook Key

This key  is used for answering an incoming call, or dialing a number either directly from the idle, or from the contact list, call list, or central directory. Pressing this key in idle opens the call list.

### 4.3.6 On-hook, and On/Off Key

The On-hook key  is used for disconnecting calls, and returning to the previous menus when navigating in any menu. A long-press in idle will switch the handset off, and a long-press when the handset is switched off will switch the handset on.

### 4.3.7 Speed Dial Keys

Any key from “2” – “9” can be set as a speed dial key. A long press on any of these numbers when the handset is in idle can be set to a short cut to calling any contact in the contact list, or in the F-Key list. For additional information on this feature see 7.1.4 *Speed Dial/On Touch Dial*.


### 4.3.8 Volume Button

These two volume buttons placed on the upper left side of the handset are used for increasing/decreasing the volume during a call.

NOTE: These buttons are used to control the volume when using the earpiece, a headset, and the loudspeaker, and the lowest volume will not mute the handset.

### 4.3.9 Mute Button


The mute button is placed under the volume buttons on the left side of the handset. This button is used during call to mute the call so that the microphone in the handset is turned off, and the counterpart cannot hear you, but you are still able to hear the counterpart of the call.

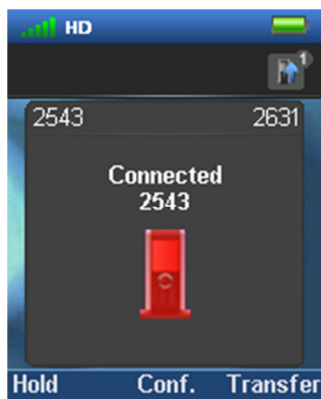

When the mute function is enabled during a call it is indicated on the “Connected” screen with the image of the handset that is red as seen above. Mute is turned off by pressing the mute button again.

## 4.4 The Keypad

The keypad is used when entering a name or number, and the sketch below shows the available characters on the handset.

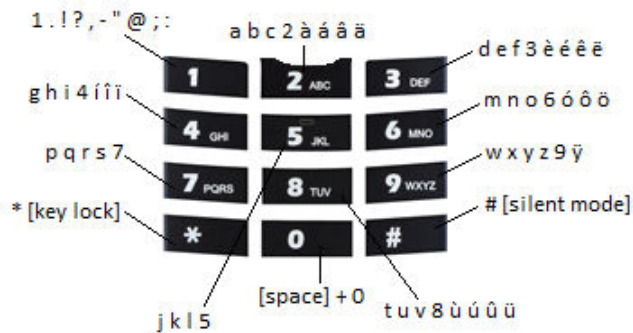

**NOTE:** Depended on the selected menu language, other characters can be available. Therefore the character order can differ from the table above.

### 4.4.1 Idle Mode, and Number Input Mode

When in idle a short press on a key enters the digits “0” – “9” and the characters \* and #.

In number input mode, a long press on “0” generates a +.


### 4.4.2 In Text Input Mode

While in text input mode a short press on a key 0-9 displays the first available character on that specific key. The marked character is then selected after a timeout, or when another key is pressed.

By pressing the \*-key it is possible to change the text to be upper/lower case or only numeric (Abc, abc, ABC, or 123).

Use the 0 to add a space in the text.

### 4.4.3 Silent Mode from #-Key

By long-pressing the #-key when the handset is in idle, the handset will turn to silent mode, and a “Sound Off” icon  will be shown in the status bar. This feature enables the user to rapidly turn on silent mode. To turn off silent mode again long press the #-key.

**NOTE:** When this mode is enabled it is possible to switch on the vibrator on the handset in Audio Settings > Vibrator (see 7.6.3 *Vibrator* for further information). Please note that all the other audio settings will be greyed out when the handset is in this silent mode.


---

## 5 Basic Operation


The following explain three basic operations of the handset: how to switch the handset on/off, how to lock/unlock the keypad, and the available options when entering a number in idle.

### 5.1 How to Switch the Handset On/Off

#### Switching on the handset

To switch the handset on long press the on-hook key  and the handset will turn on. When the handset is on, it will display “Searching” for a short while until a signal is detected, and then the handset is showing the registration number and is ready for use.



#### Switching off the handset

To switch the handset off return to the idle screen and long press the on-hook button , and the handset will turn off.


### 5.2 Lock/Unlock the Keypad

To prevent accidentally pressing keys and making a call the keypad can be locked.

#### Locking the keypad


To lock the keypad long press the  in idle, and a text message is displayed “Press and hold \*”. When the keypad is locked, the “Key Lock” icon  is displayed in the status bar.

#### Unlocking the keypad

To unlock the keypad long press  until the text message “Press and hold \*” disappears.

**NOTE:** It is possible to answer/reject an incoming call while the keypad is locked.

### 5.3 Entering a number in idle

When entering a number in idle it is possible to call the number by pressing the off-hook key .

Otherwise, the following three different options are available when a number is entered in idle.

#### Save

With this option the number can be added as a local contact by pressing the left softkey “Save”.

#### Line

Using this option, by pressing the middle softkey “Line”, you can choose which line the call should be initiated from if the handset is set up to using different lines (see the base station manual for additional information on this; reference [1])

#### Clear


Using the right softkey “Clear” deletes one character at a time to the left of the cursor.

## 6 Menu Operation

In the following a description of the different menus and submenus on the handset will be given. Before the functions of every menu are explained a menu tree will be shown at top to give an overview of how to enter the different menus.

From idle it is possible to enter some of the menus directly via the three softkeys as displayed on the image below. By pressing the left softkey the menu 'Contacts' is entered, via the middle softkey 'Central Directory' is entered, and using the right softkeys enters 'Calls' to see the different calls lists.




To enter the menu from idle press the menu activity key  on the keypad, and all the different menus can be entered:






## 6.1 Contacts

In this menu all the local contacts on the handset are displayed. Below both a full and an empty local phonebook is displayed.

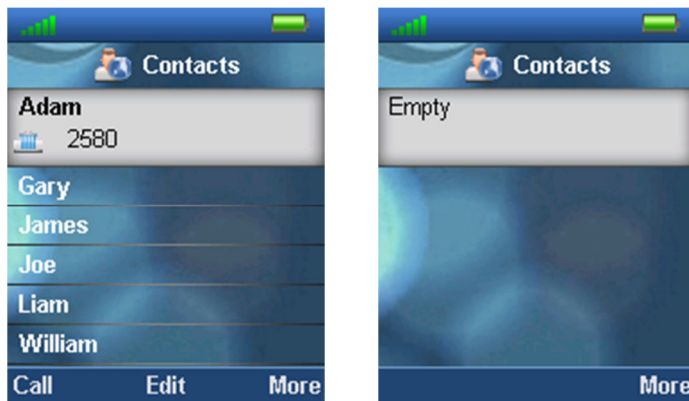

### 6.1.1 Add Contact

To add a new contact press the right softkey “More”, select “Add contact”, and the information displayed in the menu tree below can be filled out for the contact.

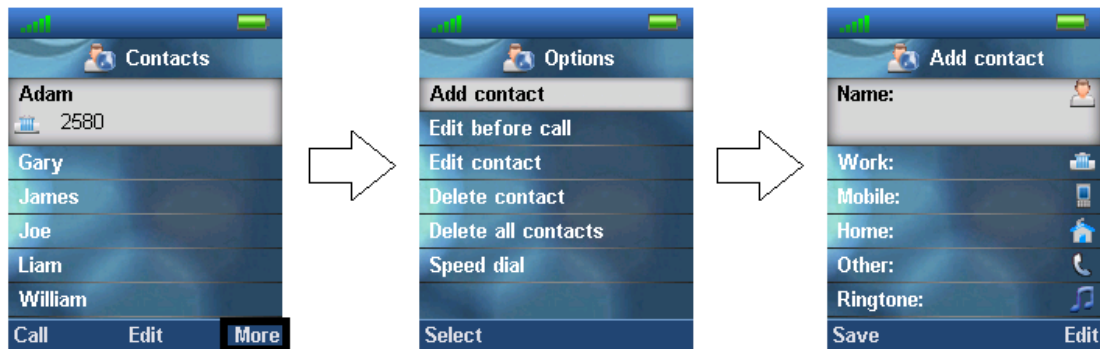

Hereby, it is possible to edit the name, add different phone numbers (work, mobile, home, and other), and add a specific ringtone to be used for exactly this contact.

To save a new contact, press the left softkey “Save”.

## 6.1.2 Call/Edit a Contact

When the “Contacts” menu contains contacts it is possible to “Call” or “Edit” each contact with the left and middle softkey, respectively.




Pressing “Call” initiates a call to this contact.

When pressing “Edit” it is possible to edit the name, work, mobile, home, other, or ringtone for the highlighted contact.

## 6.1.3 More Contacts Options

When a specific contact is highlighted, pressing “More” in the “Contacts” menu enables the features seen below.

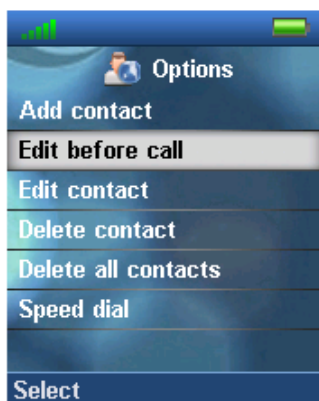

### **Edit before call**

This function makes it possible to edit the number of the contact before calling the contact.

### **Edit contact**

This has the same function as pressing “Edit” directly from the “Contacts” menu, and makes it possible to edit the name, work, mobile, home, other, or ringtone for the contact.

### **Delete contact**

By selecting this feature, the following text message is displayed: “Delete current contact from local contact list?”

To delete the selected contact press the left softkey “Yes”.  
To go back to the “More” menu, press the right softkey “No”.

### Delete all contacts

With this function all the contacts in the local contact list can be deleted, and by selecting this option the following text message is displayed: “Delete entire local contact list?”

To delete all contacts in the local contact list press the left softkey “Yes”.  
To go back to the “More” menu, press the right softkey “No”.

## 6.1.4 Speed dial/One Touch Dial

With this feature it is possible to add a contact to the speed dial. Hereby, this contact can be called directly from idle by long pressing the speed dial number that the contact is added to. The speed dial feature allows the user to assign a speed dial number (2 – 9) to a contact. This enables the user to call a contact by making a single long press on one of the number keys (2 – 9) when in idle.

A contact can only be assigned to one speed dial number at a time. The first defined number of the contact will be dialed when the speed dial key is pressed. This means that if all numbers (work, mobile, home, and other) are defined for the contact then the work number will be dialed. If the work number is not defined then the mobile number is dialed etc.

**NOTE:** The ‘1’ key is reserved for voicemail. Long key press on ‘0’ is used for starting a normal dial string with ‘+’.


### 6.1.4.1 How to setup speed dial

**Prerequisite:** There must be at least one contact in the contact list.

**Steps:**

1. Go to the contact list > Move to the contact that you want to assign a speed dial number to.
2. Select “More” > Select “Speed dial”
3. Move to the speed dial number (2 – 9) that you want to assign the contact number to.
4. Select “Add”. The contact name should be appended to the speed dial number.
5. Leave speed dial list by pressing the red “On-hook” key > Press “On-hook” key to exit “More” menu > Exit contacts list by pressing “On-hook” key.

In the picture below it is showed how the local contact ‘Adam’ is added as a speed dial number to 2.

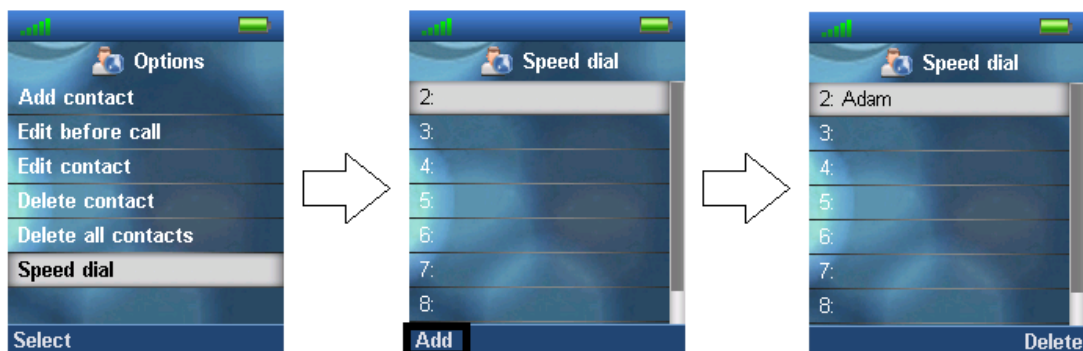


### 6.1.4.2 How to call a speed dial number

Prerequisite: The handset is in idle and the key lock is not active.

Steps:

1. Make a long key press (> 2 seconds) on a speed dial key that is assigned to a contact. The first number defined is dialed.



Hereby, the local contact 'Adam' can be called directly from idle by long-pressing  as displayed below:




**NOTE:** The speed dial function can also be set up for the F-Keys (for additional information on this see section 7.8 F-Keys)

## 6.2 Central Directory

In the "Central directory" menu different contacts can be called according to which list the system administrator has setup in the base system. This menu can be entered directly from idle with the

middle softkey , or from the menu by pressing the menu activity key  and choosing "Central directory".

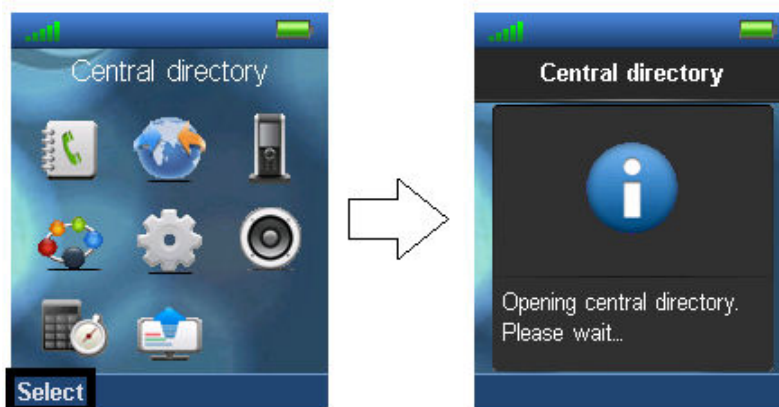

### 6.2.1 LDAP Mode and Local Mode

The "Central directory" can be set to LDAP Mode or Local Mode via the web interface of the base station (see [1] for additional information on this).

When set to LDAP mode, opening the central directory will show a search screen as displayed in the following. By leaving the search field empty and pressing the middle softkey "Search" all the contacts in the central directory will be displayed.



**NOTE:** When the central directory is in LDAP mode pressing right softkey "Back" the handset will return to the "Search" field, and a new search for a contact can be made. Pressing the red "On-hook" button, in the central directory, will send the user back to idle.

If the central directory instead of LDAP Mode is set to Local mode, opening the central directory will get you directly to browsing mode, and to enter the search mode press the middle softkey as displayed below.




The search function is similar in these two modes. When typing something in the search field, and pressing search the results of the search will be displayed. This is showed in the following images.



To scroll through the search results use the navigation keys up and down and you will scroll through the list. If a green arrow is seen to the right of a contact (as seen above), this contact has more than one number added, and to scroll through these different numbers use the left/right navigation keys.

### 6.2.2 Calling a Contact in the Central Directory

To call a contact from the central directory press the green “Off-hook” button, and the contact number that currently appears on the screen will be called.

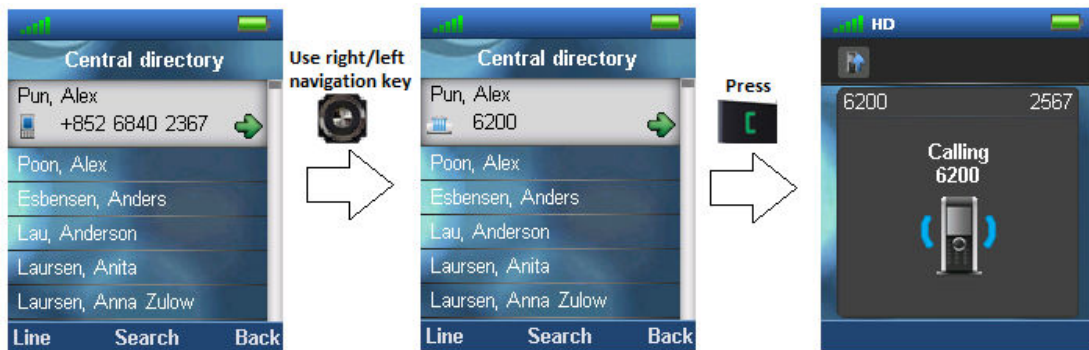

If a contact has more numbers added a green arrow is shown to the right of the contact, and by pressing the right/left navigation keys it is possible to navigate between the different numbers assigned to that contact. The number that currently appears on the screen is the one that is called.

### 6.2.3 Line




By pressing the left softkey “Line” it is possible to choose different lines for the call to be made. For example if the handset is assigned to different extension numbers, or to different PBX's; as illustrated in the picture below. By choosing one of these different lines the call is then routed through the selected one. The line that is set in Settings > Line is used as default.



To see additional information on this “Line” feature, and more about the “Central Directory” setup on the base station please check the user manual for the base station; reference [1].

### 6.3 Calls


The menu “Calls” consists of lists of all the calls that have been made to or from the handset.

This menu can be entered directly from idle with the right softkey , by pressing the green off-hook button  or from the menu by pressing the menu activity key  and choosing “Calls”.



When opening the “Calls” menu, the list “All calls” is automatically opened.

Using the left/right navigation keys  it is possible to view the four different lists.

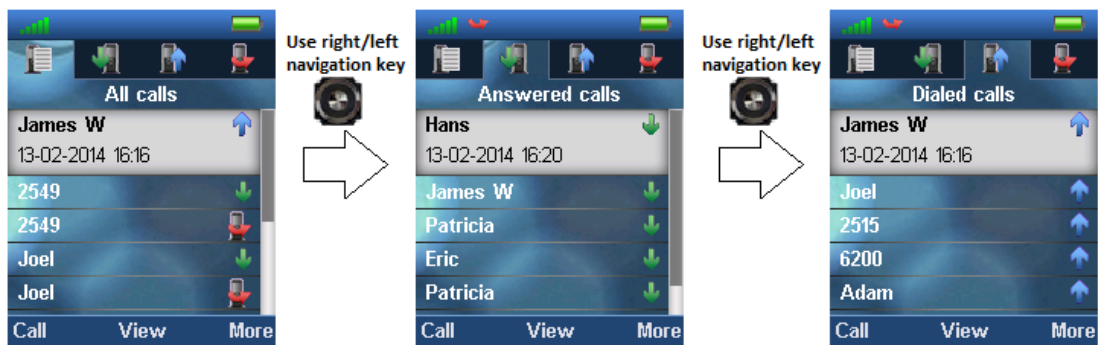


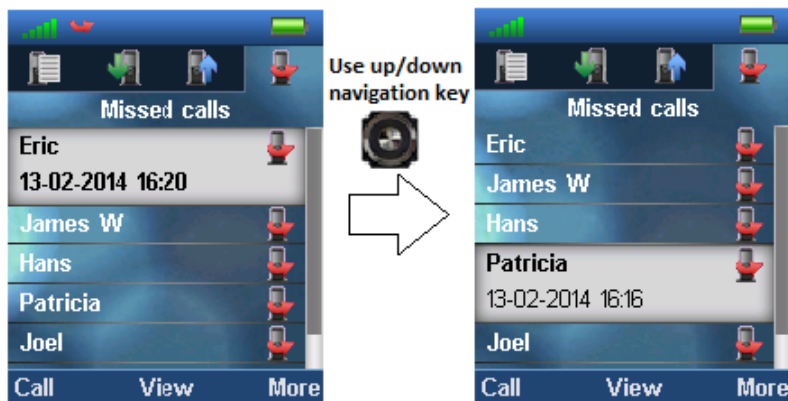
All calls: This list consists of all the different call types (including both outgoing and incoming) that have been made on the handset.

Answered calls: This lists all the incoming calls that have been answered.

Dialed calls: All the calls that have been dialed from the handset are listed.

Missed calls: This lists all the incoming calls to the handset that have not been answered.

When there is a missed call on the handset a red icon  is displayed in the status bar until the entry has been displayed in the missed call list. As shown in the images below, the information displayed about the missed call in the call list is in bold text until the entry has been scrolled over once.





Using the up/down navigation keys scrolls through the list of missed calls. When the entries have been displayed once, the text displaying call information is no longer bold, and the red missed call icon disappears from the status bar indicating that the user has seen missed call; this is displayed in the second image above.

### 6.3.1 Call

To initiate a call directly from the local call list use the up and down navigation keys to highlight an entry, and press the left softkey "Call". This will initiate a call to the highlighted entry as display in the images below.




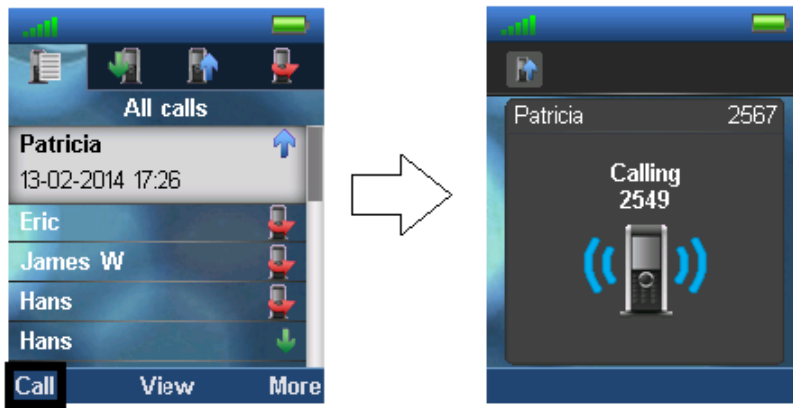

A call can also be made to the highlighted entry by pressing the green off-hook key .


### 6.3.2 View

The middle softkey enters a “View” function for each entry. With this feature the following details of the call can be seen: number, line number, status (answered, dialled, missed), duration, and time stamp as displayed in the image below.

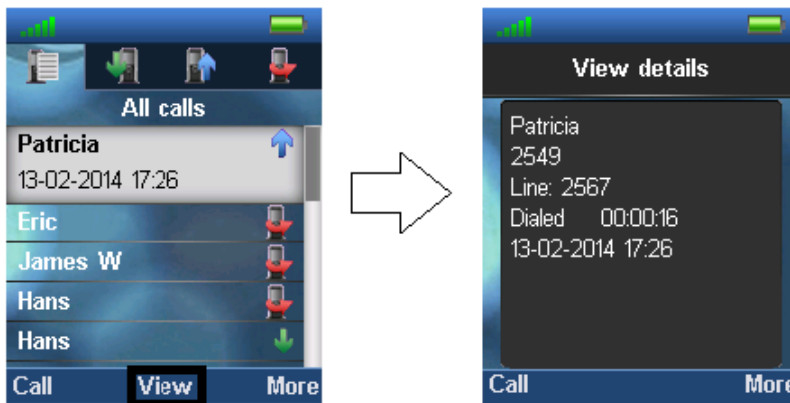

### 6.3.3 More Calls Options

When a specific call is highlighted, pressing “More” in the “Calls” menu enables the features seen below.

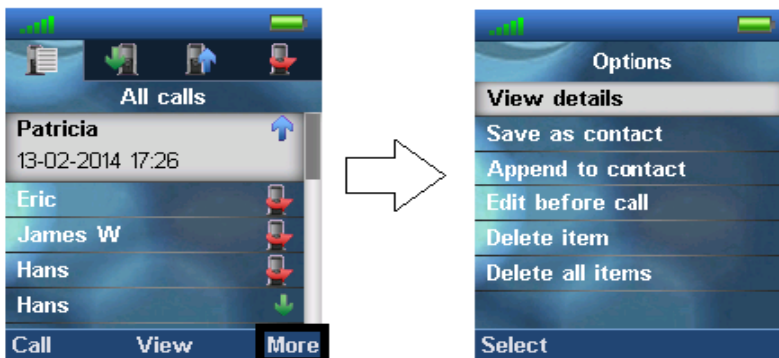

### View details

This shows the same details about the call as the “View” function explained in 7.3.1 Call/View.

### Save as contact

With this feature it is possible to save the number in the call list as a contact.

### Append to contact

This function makes it possible to add the number in the call list to an existing contact.

### Edit before call

With this function the number in the call list can be edited before calling.

### Delete item

By selecting “Delete item” the following text message is displayed: “Delete current item from list?”

To delete the item from the call list, press the left softkey “Yes”.

To return to the call list, press the right softkey “No”.


### Delete all items

This feature makes it possible to delete all items in the specific call list. By selecting “Delete all items” the following text message is displayed: “Delete all items in this list?”

To delete all items in the specific list, press the left softkey “Yes”.

To return to the call list, press the right softkey “No”.

## 6.4 Connectivity

The “Connectivity” menu is entered in the menu by pressing the menu activity key  in idle.



In this menu it is possible to register or deregister the handset to a certain base system. Moreover, the “Select network” function makes it possible to register the handset to more than one base system.

### 6.4.1 Register

When a handset is to be registered on a base system, the user will be prompted for an access code (base registration PIN) before the registration procedure is started. Since it is possible for the handset to be registered on different base systems that are out of range of each other, the “Register” menu

displays 10 different entries with which the handset can be assigned to different base systems. When selecting an “Empty” entry the user is prompted for the PIN code as shown below.



The access PIN code is default “0000” and cannot be changed via the handset. The access PIN code can only be changed via the web interface on the base (please check the additional document via [1] for more information about handset registration on a base system).


It is also possible to overwrite an existing registration by selecting that entry that should be overwritten instead of selecting an “Empty” slot. This is displayed below.



**NOTE:** For the handset to function on different base systems, the handset must be completely out of range of system 1 to connect to system 2.

### 6.4.2 Deregister


The handset can be deregistered from a registration. The user will in this case be prompted for a PIN code (base deregistration PIN), the PIN code is default “0000” and cannot be changed via the handset. This is displayed below.

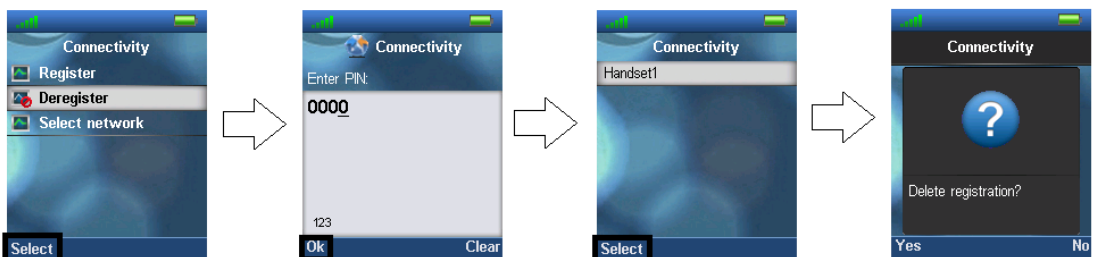

When the registration that should be deregistered is selected, a warning message “Delete registration?” will be displayed as seen above. The user then has to accept by pressing the left softkey “Yes”, or the right softkey “No” to cancel the operation.


### 6.4.3 Select Network

If the handset is registered to different base systems (networks) the preferred network can be chosen in this menu by highlighting it and pressing the left softkey "Select" as shown below.

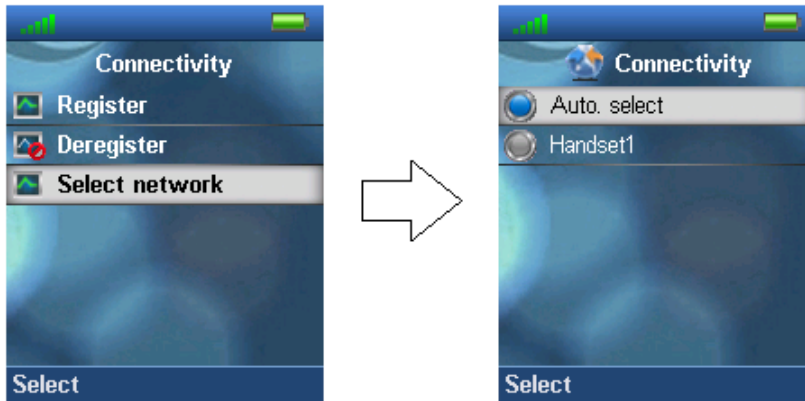

For the handset to automatically select a network "Auto. select" can be selected. In this way, the handset automatically chooses the network in range.

### 6.5 Settings

The "Settings" menu is entered through the menu by pressing the activity menu key  in idle.



The "Settings" menu contains the following personal handset settings:


Settings	
	Time & Date
	Language
	LED Signal
	Power save
	Security
	Handset name
	Line
	Reset settings
	Status
	Auto answer
	Silent charging

	Do not disturb
	Hide number
	Call Forward
	Idle screen saver

Each of these settings will be described in the following.


### 6.5.1 Time & Date

To set the time and date in the handset select the “Time & date” menu. Below it is shown how the time and time format can be changed.

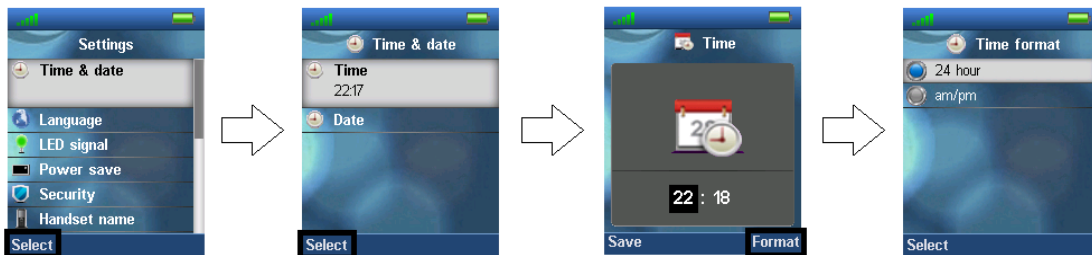

To change the time use the keypad, or the navigation keys to set the time, and press save; as seen in the third image. The time format can also be changed by pressing the right softkey “Format”. In “Time format” the preferred time format (24 or 12 hours) can be selected.

In the same way the date can be changed as seen in the images below:

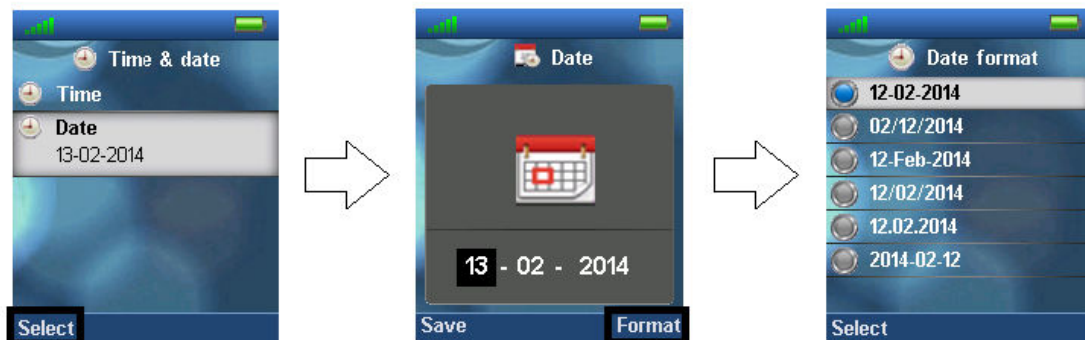

In “Date format” the preferred date format (i.e. dd-mm-yyyy) can be selected by using the up/down navigation keys.

### 6.5.2 Language

In this menu it is possible to select different languages for the handset. The menu tree below shows the different languages available on the handset.

Settings	Language	English
		Espanol
		Deutsch
		Francais
		Italiano

		Nederlands
		Portugues
		Dansk
		Svenska
		Turkce
		Polski
		Norsk
		Russian-1
		Russian-2
		Hrvatski
		Srpski
		Slovinsky
		Cesky


The currently applied language is displayed when highlighting the menu “Language”.



When entering this menu a specific language can be selected by pressing the left softkey “Select”.

### 6.5.3 LED Signal

The LED at the upper left corner of the handset has three different colours: green, yellow, and red. The different colours can be assigned to distinctive situations by the user.

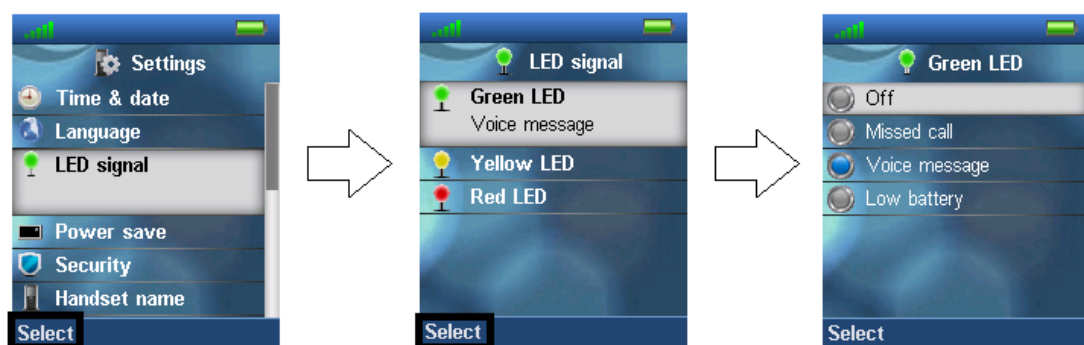

As seen in the images above each colour of the LED signal (green, yellow, and red) can respectively be configured to indicate:

### Missed call

The LED signal blinks in the chosen colour when there is a missed call.

### Voice message

The LED signal blinks in the chosen colour when there is a voice mail message that has not been listened to.

### Low battery

The LED signals blinks in the chosen colour when the battery is low (below 20% battery on the handset).

### Off

The LED signal is disabled, and does not blink in any situation.

## 6.5.4 Power Save

The power save option improves battery life by turning off the display after a certain amount of time.




In the images above it is displayed how the power save can be set between 5 seconds and 60 seconds. A certain time interval is chosen by pressing the left softkey “Select” when the desired time interval is highlighted.

## 6.5.5 Security

In the “Security” menu it is possible to set an automatic keylock, and change the PIN of the handset.

### Automatic keylock

If the “Automatic keylock” feature is enabled, the keypad will lock automatically after a certain amount of time that the handset has not been used. The currently applied setting is displayed when highlighting the menu “Automatic keylock”.

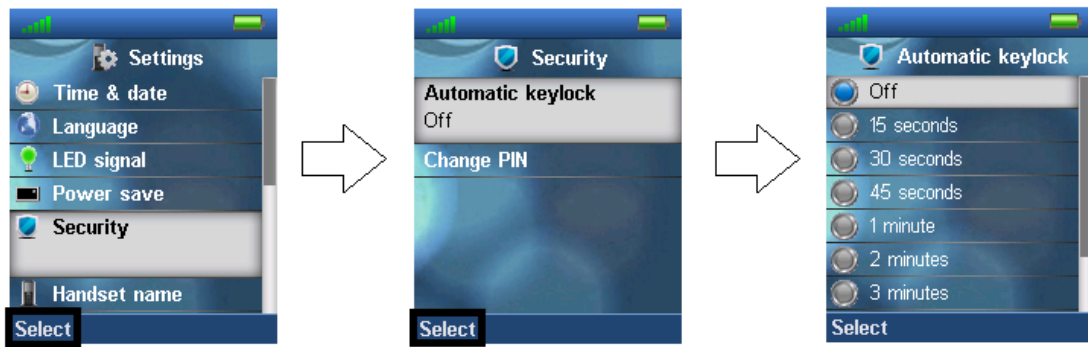


A list of selectable timeouts is displayed when the user enters the “Automatic keylock” menu. Any one of these can be selected by pressing the left softkey “Select” when the desired time interval is highlighted. Afterwards, when the handset has been inactive in the selected time interval the keypad will lock automatically.

**NOTE:** It is not possible to use the keys when these are locked. The user has to unlock the keys by long-pressing **\***. Only emergency numbers (e.g. 999 or 112) can be called without the user having to unlock the keys.

**Change PIN**

In “Change PIN” the handset security PIN code can be changed – the PIN code is i.e. used when settings are reset.

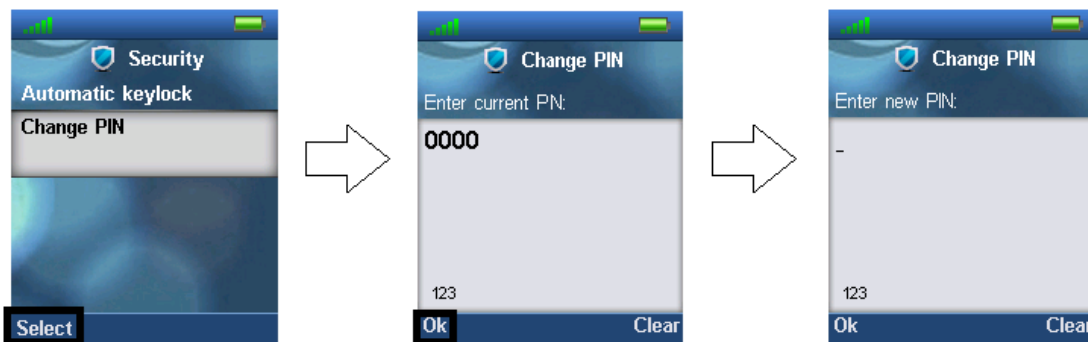

As seen above the current PIN code must be entered first to change it to a new PIN code.

**6.5.6 Handset Name, Line, Reset Settings, Status**

In the following settings, it is possible to change the handset name, select a line, reset settings, and see the status data from the base station.

Settings	Handset name
	Line
	Reset settings
	Status



### Handset name


By selecting “Handset name” the name of the handset can be changed.



As seen above, an editor is displayed when entering the menu. The handset name is typed in by using the numeric keys and afterward pressing the left softkey “Save”. The handset name is displayed in the third line of the idle display.

### Line


If the handset is used in a multiline environment, it is possible to select preferred lines for the handset to make outgoing calls from in this “Line” menu as shown below.

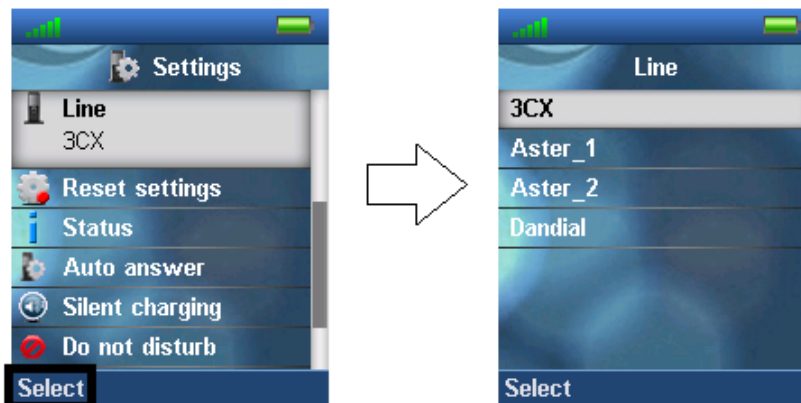

**NOTE:** To see additional information on this “Line” feature, please check the base system document via [1].

### Reset settings


The handset settings can be reset to default settings by selecting menu “Reset settings”.

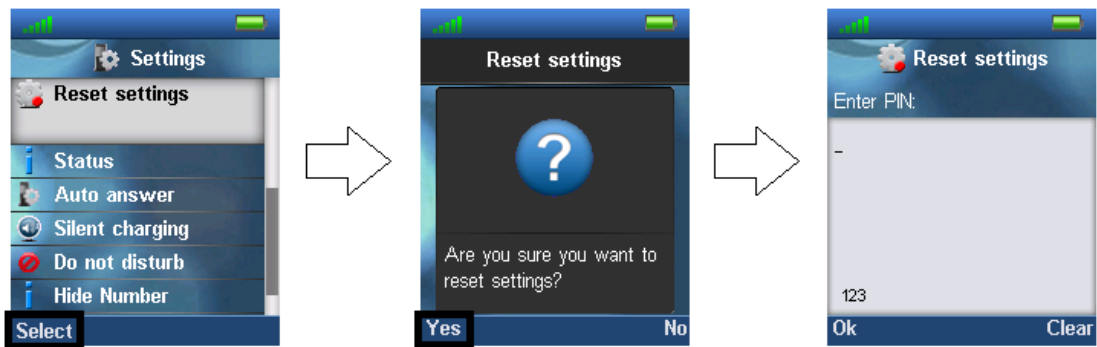

As it can be seen above, the handset PIN code is required to reset the handset to its default settings. After such a reset the handset is still registered. The base is not reset to default when selecting this feature.

### Status

The menu "Status" delivers some useful information to the end user about both base station that the handset is currently using and handset status.

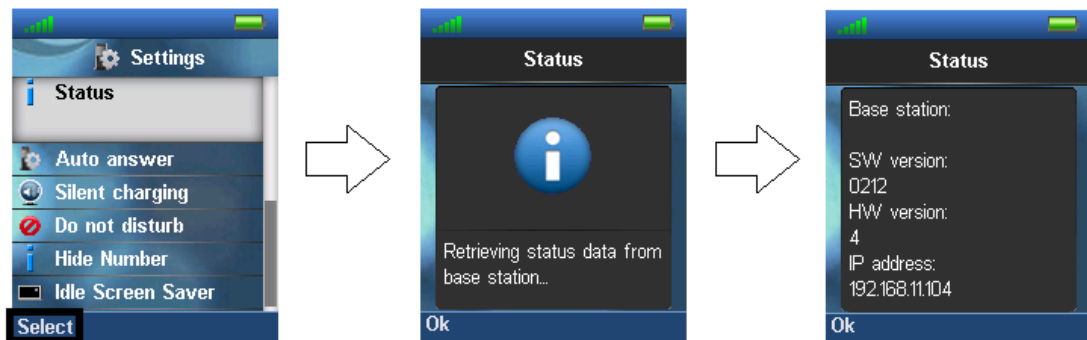

The displayed information is as follows.

#### Base station:


- Software version (the current software version of the base station)
- Hardware version (the hardware version of the base station)
- IP address (the IP address of the base station)
- MAC address (the MAC address of the base station)
- System name (the name of the system of base stations that the handset is registered to)

#### Handset status:

- Software version (the current software version of the handset)
- Hardware version (the hardware version of the handset)
- DECT band (the DECT band that the handset is using, e.g. EU or US)
- Battery level (the current battery level of the handset)
- IPEI (the IPEI/IPUI number of the handset is a static number identifying the specific handset)

## 6.5.7 Auto Answer

In this menu it is possible to change the settings for auto answer on the handset.

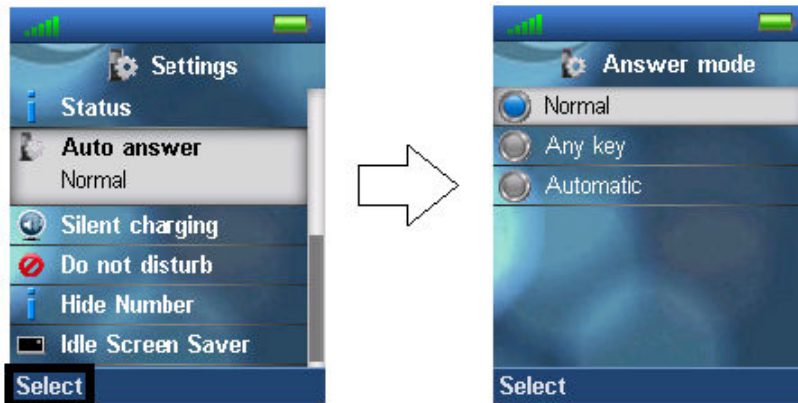

The “Auto answer” feature makes it possible for the handset to automatically answer an incoming call. This setting can be set to the following conditions:

### Normal

With this enabled the handset does not answer a call automatically, but the user must always press the green “Off-hook” key to answer a call. The call is not answered by removing the handset from the charger.

### Any key

In this mode pressing any key on the keypad (except from the red “On-hook” key, and the three softkeys that still have their different functions) will answer an incoming call. The call is not answered by removing the handset from the cradle/charger.

### Automatic

If the feature “Automatic” is enabled on the handset, then the incoming call is answered automatically after 5 seconds.

## 6.5.8 Silent Charging

The option of “Silent charging” enables the possibility of the handset not ringing during charging. The handset must be placed in the charger in order for this to work as mentioned below. The options of silent charging are seen below.



### Off


The handset is ringing when receiving incoming calls (audio alert and incoming call screen displayed).

### Silent


The handset receives an incoming call as normal, but it does not ring (i.e. no audio alert but the incoming call screen is displayed).

## 6.5.9 Do Not Disturb

This “Do not disturb” feature is to be used when the handset user does not want to be disturbed.

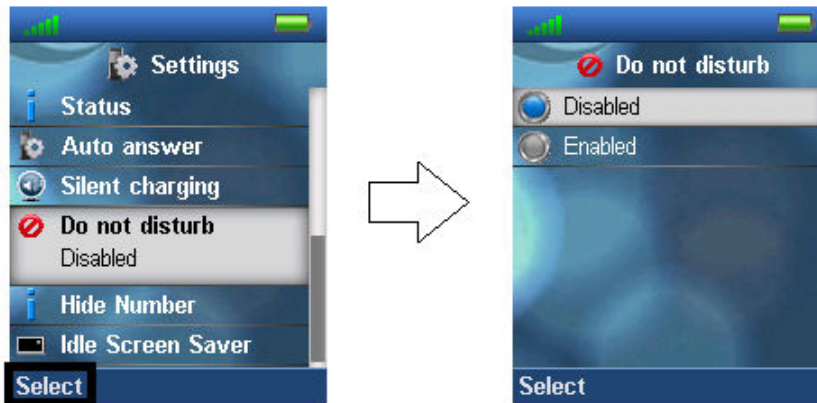


With this feature disabled, the handset reacts as normal on all incoming activity. If the function is enabled, though, the handset will not react, and the calling counterpart will be directed to voice mail if this feature is enabled.

The “Do not disturb” icon  is displayed in the status bar when “Do not disturb” is enabled on the handset.

## 6.5.10 Hide Number

The “Hide Number” function enables that the user can make a call where the counterpart cannot see the caller ID of the caller.

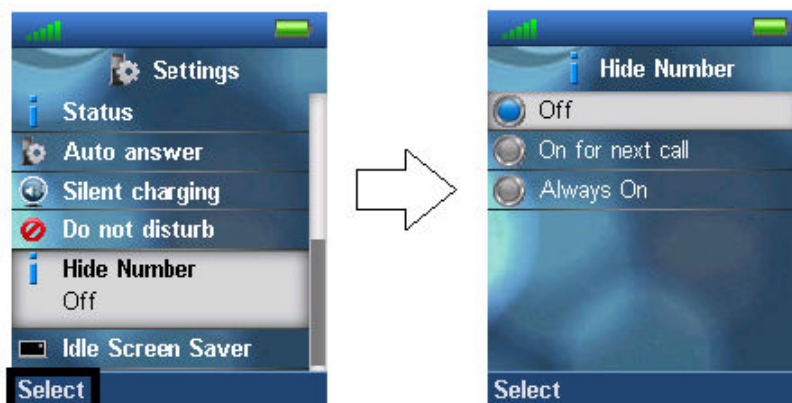

### Off

When the “Hide Number” function is set to “Off” with the left softkey, the caller ID of the handset is displayed to the counterpart of the call.

**On for next call**

If this function is enabled, then the caller ID will be hidden to the counterpart only for the next outgoing call, and then for the following calls the number will not be hidden anymore.

**Always on**

With the “Always on” enabled, the caller ID will be hidden for the counterpart for all outgoing calls initiated until this feature is disabled again.

Note:

When hide number enabled, base sends SIP header “Privacy: id” to address sip:anonymous@anonymous.invalid

The PBX must support anonymous calls otherwise call rejected

## 6.5.11 Call Forward

The “Call Forward” feature enables the user to forward all incoming calls in different cases as described below.



### Forward Unconditionally


If this feature is enabled all incoming calls to the handset will be forwarded to the number setup in “Forward To” as seen below.



In this case the handset will not receive any incoming calls, but all calls will automatically be forwarded to the number setup in “Forward To”.

### Forward No Answer


This feature controls if incoming calls to the handset should be forwarded if the call is not answered.

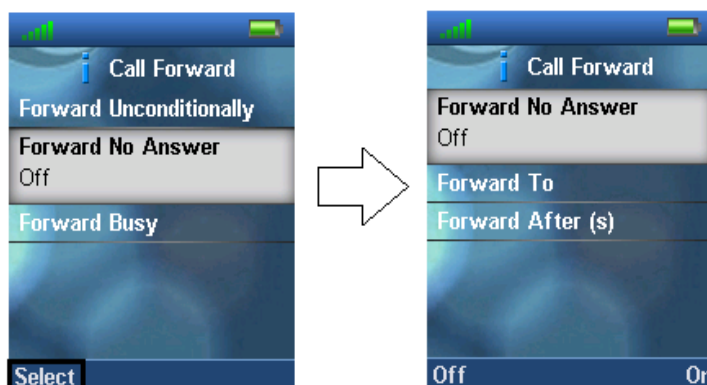

By enabling “Forward No Answer” incoming calls to the handset is forwarded if the call has not been answered during a certain time period as for example 30 seconds [Forward After (s)]. This feature is setup in the same way as “Forward Unconditionally” as displayed above.

### Forward Busy


The “Forward Busy” function controls if the handset will forward the call when busy; e.g. when the user is in another call.

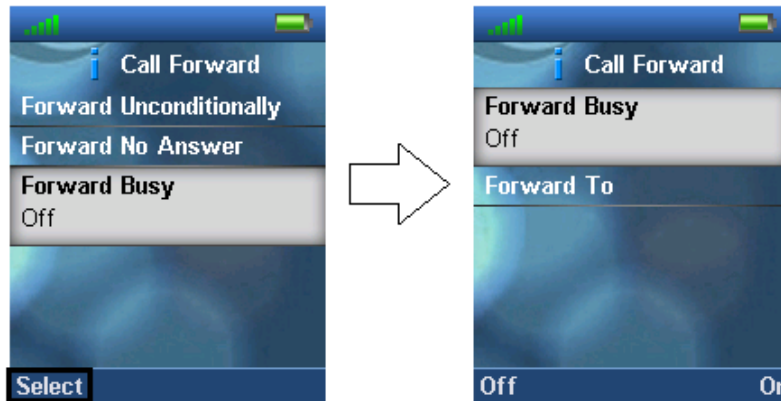

When “Forward Busy” is enabled the handset forwards all incoming calls if the handset is busy, or if the user presses “Reject” on the call. This feature is enabled in the same way as “Forward Unconditionally” which is showed above.

### 6.5.12 Idle Screen Saver


The idle screen saver has the function that when the handset is in the charger, the handset screen will dim the lights, but never turn off if this feature is enabled.

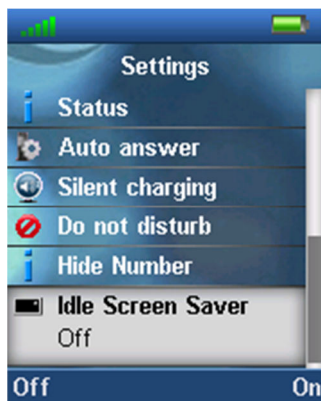

If the “Idle Screen Saver” is set to “On” with the right softkey, the screen will not turn off completely, but just dim the lights when the handset is in the charger.

The “Idle Screen Saver” can be set “Off” with the left softkey, whereas the screen will turn off completely after the power save, even with the handset placed in the charger.

## 6.6 Audio Settings

The “Audio Settings” menu is entered through the menu by pressing the activity menu key  in idle. It contains different settings for the sounds on the handset.




### 6.6.1 Ring Volume and Ring Melody

When the handset receives an incoming call, different ring volumes and melodies can be selected.

#### Ring volume

The ring volume can be adjusted from mute to volume 6. The currently applied level is displayed when entering the menu “Ring volume”.

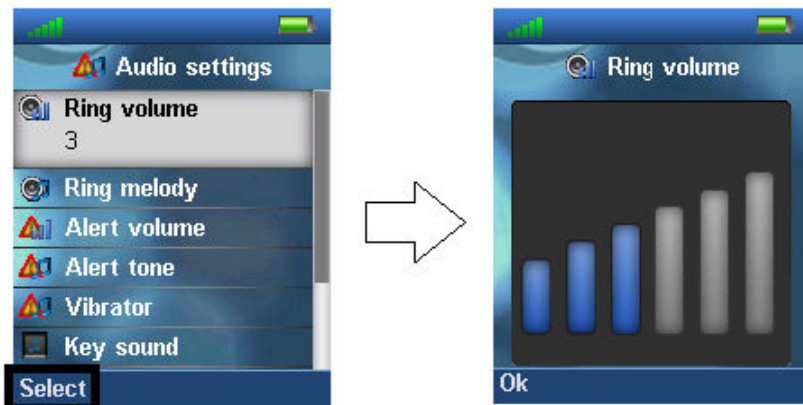


To select the desired ring volume the navigation keys up/down or right/left is used to respectively increase or decrease the volume. Thereby, pressing “Ok” saves the current ring volume. The currently applied ring melody is played when adjusting the ring volume so that the respective ring volume can be heard before selected.

#### Ring mute

The ringer is switched off when the lowest level is selected in “Ring volume”, and a mute image is showed in the display as seen below.



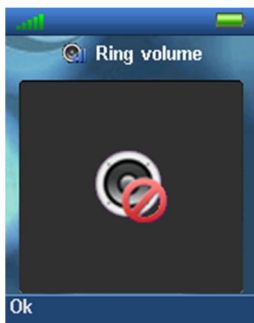

When the ring volume is set to mute, the “Sound off” icon is displayed in the status bar, and no sound is heard when receiving an incoming call.

### Ring melody

Six different ring melodies can be chosen for the handset to play when receiving an incoming call. A list of melodies is displayed when entering the menu. Each displayed melody on the list can be selected by pressing the left softkey “Select”.




To hear the melody before selecting it, each melody in the list can be played by selecting the right softkey “Play”. The softkey “Play” changes to “Stop” during playback and the playback can then be stopped by pressing this button.

## 6.6.2 Alert Volume and Alert Tone

When an alarm clock occurs on the handset, different ring volumes and melodies can be selected.

### Alert volume


The alert volume can be adjusted from mute to volume 6. The currently used level is displayed when entering the menu “Alert volume”.

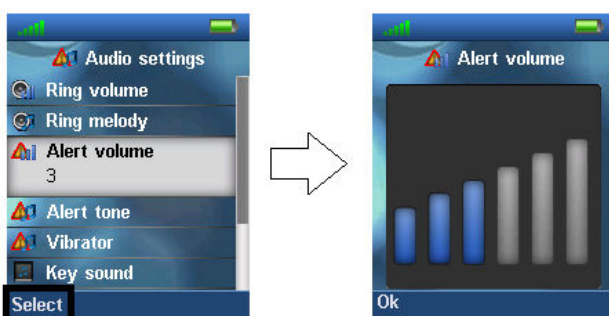

To select the desired alert volume the navigation keys up/down or right/left is used to respectively increase or decrease the volume. Thereby, pressing “Ok” saves the current alert volume. The currently applied alert melody is played when adjusting the alert volume so that the respective alert volume can be heard before selected.

#### Alert mute

The alert sound is switched off when the lowest level is selected in “Alert volume”, and a mute image is showed in the display. When the alert is mute, no audio is heard when an alarm occurs.

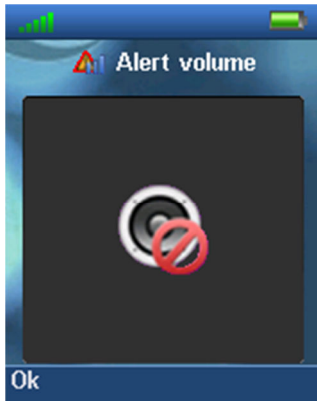

#### Alert tone


Six different melodies can be chosen for the handset to play when an alarm occurs. A list of melodies is displayed when entering the menu. Each displayed melody in the list can be selected by pressing the left softkey “Select”.



To hear the melody before selecting it, each melody on the list can be played by selecting the right softkey “Play”. The softkey “Play” changes to “Stop” during playback and the playback can then be stopped by pressing this button.

### 6.6.3 Vibrator

In the vibrator menu different vibrator options can be selected for the handset. The options for the handset vibrator are as showed and explained below.

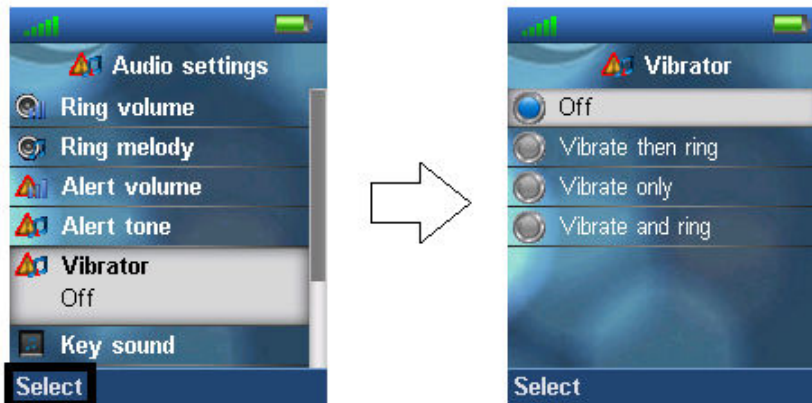

#### Off

This function disables vibrator whereas the handset will not vibrate at incoming calls.

#### Vibrate then ring

If this function is enabled the handset will start vibrating during an incoming call, and then after four times of vibration the handset will stop to vibrate and only ring instead.

#### Vibrate only

With this function chosen the handset will only vibrate and not ring even though the ring signal is not mute.

#### Vibrate and ring

When this function is enabled the handset will both vibrate and ring at the same time when receiving an incoming call.

### 6.6.4 Key Sound

The "Key Sound" settings controls if a key sound is heard as the keys are pressed on the handset, or if no sound is made. The following three different options can be selected for the key sounds:



#### Silent

If this feature is chosen, there will not be heard any sounds when pressing the keys on handset.

### Click

With this function enabled a click sound is heard when a key is pressed.

### Tone

When this options is enabled a tone will be heard when a key is pressed.

**NOTE:** No key sound will be generated when pressing the keys during “key lock state” even though one of the options “Click” or “Tone” is enabled.

## 6.6.5 Confirmation Sound

This feature can either enable or disable confirmation sounds on the handset.




When the function “Confirmation sound” is enabled (On), an audible indication is given when an event succeeds or fails.

For example a positive confirmation sound is generated when a new setting is set or an entry is saved successfully in the phonebook. A negative confirmation sound is generated if the action fails.

When the confirmation sound is set to “Off” no sound is generated in either case.

## 6.6.6 Coverage Warning

A coverage warning can be set to occur when the handset is out of range of a base station in the system.

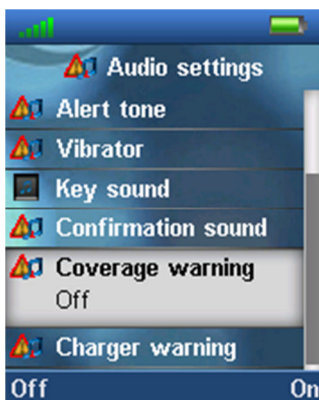


When the feature “Coverage warning” is enabled (On) an audible indication is given in the earpiece of the handset when the user is close to the maximum range of the nearest base station in the system.

Hereby, the user knows that the call is at the edge of the possible coverage of the call, and that the user has to move back in to coverage to keep the call going.

**NOTE:** This feature is only working when the handset are in call. Not when in idle.

### 6.6.7 Charger Warning


“Charger Warning” is a feature that enables the handset to make a sound when put in the charger to indicate that the handset is charging.

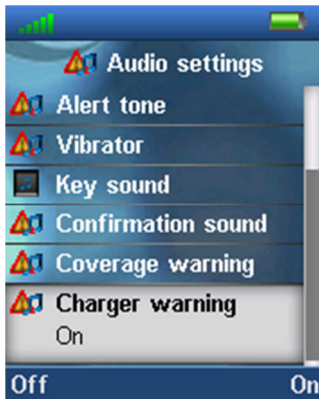


When the feature “Charger warning” is enabled (On), then an audible indication will be given when the handset is correctly connected to the charger.

If the feature is set to “Off” no audible indication will be given as the handset is put in the charger.

## 6.7 Alarms

The “Alarm” menu is entered through the menu by pressing the activity menu key  in idle.

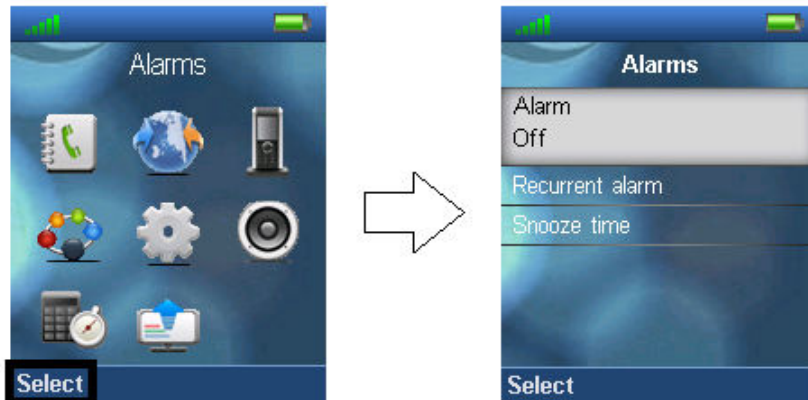

This feature allows that alarms can be set on the handset to occur at a specific time.

### Alarm


When “Alarm” is selected it is possible to set a time for an alarm to occur, and then press left softkey “Save” to save the alarm.



An alarm will then occur at the time that has been set. The time can both be set with the numeric keypad, or with the up/down navigation keys.

**Recurrent alarm**

This feature enables another alarm to be set, thereby another time can be saved by pressing left softkey "Save". In this way, two alarms can occur.

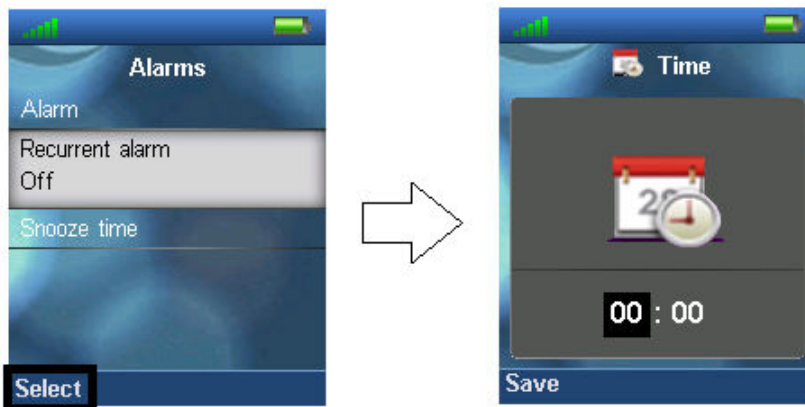

The time can both be set with the numeric keypad, or with the up/down navigation keys.


**Snooze time**

The "Snooze time" indicates the time for the alarm to be snoozed when it goes off.



This means that when the alarm occurs the user can either “Dismiss” it with the right softkey, or “Snooze” it with the left softkey. In this case the snooze time gives the time before the alarm occurs again.

## 6.8 F-Keys


The “F-Keys” menu is entered through the menu by pressing the activity menu key  in idle. This menu controls functional keys to be set on the handset. This means that the handset user is able to add certain functional numbers in this menu; as for example the number to the user’s mailbox.



When there are F-Keys saved in the list it is possible to call each F-Key number by pressing the left softkey “Call”.

Additionally, each F-Key contact can be edited directly from the F-Key list by pressing the middle softkey “Edit”.

When pressing the right softkey “More” the following options are possible to select.

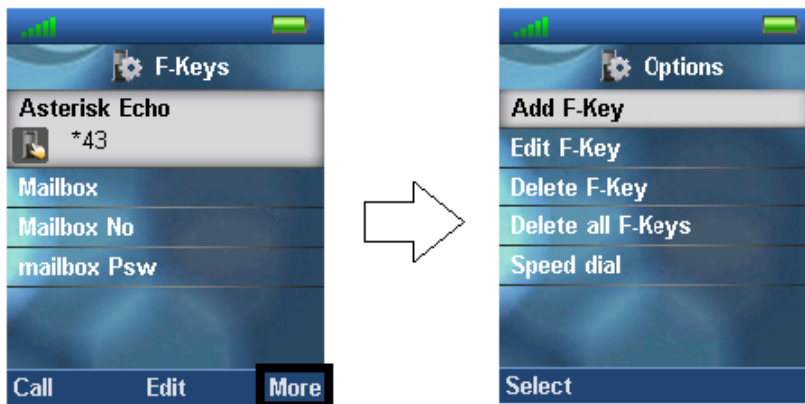

### Add F-Key

To add a new F-key press the right softkey “More” and it is possible to add a new function key. In the case of e.g. adding a user’s mailbox, pressing the right softkey “Edit” makes it possible to enter the name and number, respectively. For the new F-key to be saved press the left softkey “Save”, and this F-key is added to F-keys.

### Edit F-Key

This feature enables that an existing F-key can be edited, if the name or number need changing.

**Delete F-Key**

By selecting "Delete F-Key" the message "Delete current contact from F-Key list?" appears on the screen, and it is possible to press the left softkey "Yes" to delete the currently highlighted F-Key, or to press the right softkey "No" to cancel and go back to the F-Keys menu.

**Delete all F-Keys**

With this function it is possible to delete all the saved F-Keys on the handset. When selecting "Delete all F-Keys" the message "Delete entire F-Key list?" appears, and by pressing left softkey "Yes" this action is performed, whereas pressing the right softkey "No" cancels the action and returns to the F-Keys menu.

**Speed dial**

When selecting "Speed dial" the list with speed dial numbers assigned to long pressing the numbers 2-9 appears.

From this menu it is possible to add the chosen F-Key to a speed dial number with the left softkey "Add". If an already existing speed dial entry is highlighted the left softkey gives the opportunity to instead "Replace" the current speed dial entry with this one.

To delete a speed dial entry press the right softkey "Delete" and the entry is deleted straightaway.

**NOTE:** This speed dial list uses both contacts from the contact list, and from the F-Keys list. For additional information on this feature see the section *7.1.4 Speed Dial/On Touch Dial*.




---

## 7 Calls Operations

In this section the different types of calls and call handling will be described.



### 7.1 Incoming call

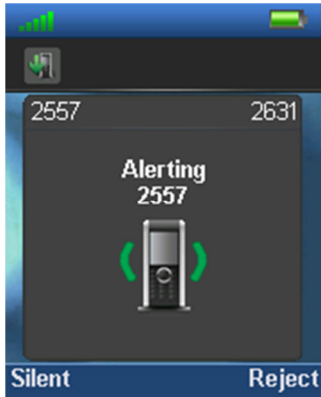As the handset receives an incoming call an alerting screen will be displayed as displayed below. This will be accompanied by a ring signal and/or a vibrating handset according to the respective settings on the handset.



The calling party's handset number will be shown in the display, and an additional name is displayed if the calling party's handset number is stored in the local phonebook.


#### 7.1.1 Answering an Incoming Call

To answer an incoming call press the green "Off-hook" button , or press the "Loudspeaker" key  to answer the call in speaker mode.

**NOTE:** When "Auto answer" is set to "Automatic" an incoming call is answered automatically after one ring signal. If "Auto answer" is set to "Any key" an incoming call can be answered by pressing any key on the keypad, and not just the green "Off-hook" button.

#### 7.1.2 Reject an Incoming Call

It is possible to reject an incoming call by pressing the right softkey "Reject" when receiving an incoming call. This way the calling party will receive a busy tone, and "User busy" displayed on the screen as shown in the picture below.

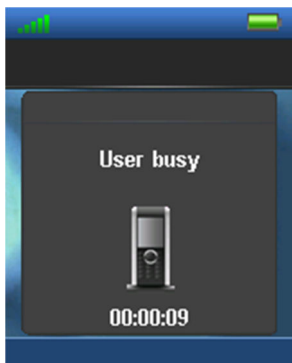


NOTE: An incoming call can also be rejected by pressing the red “On-hook” key.

### 7.1.3 Silencing an Incoming Call

When the handset is alerting it is possible to press the left softkey “Silent” whereas the handset will continue to alert, but without any ringing heard.

### 7.1.4 Ending a Call

To end an ongoing call press the red “On-hook” key , and the call will be terminated. The duration of the call is shown in the display. Furthermore this duration time can also be viewed from the call list where the call is stored.

NOTE: If one call is active and another call is on hold, then the active call will be terminated when pressing the red “On-hook” button, and the handset automatically returns to the call on hold; i.e. the call on hold is now active, and the user has to press the red “On-hook” button again to terminate this call.

## 7.2 Initiating a Call

A call can be initiated from different locations on the handset:


- By entering the number directly from idle
- From the “Contacts” menu
- From the “Calls” menu
- From the “Central Directory”

How to initiate a call from these different directories is explained in the following sub sections.

### 7.2.1 Initiating a Call from Idle

When initiating a call it must be done according to the following:

1. Enter the number of the person you want to call when the handset is in idle.
2. Press the green “Off-hook” button  to call the number.

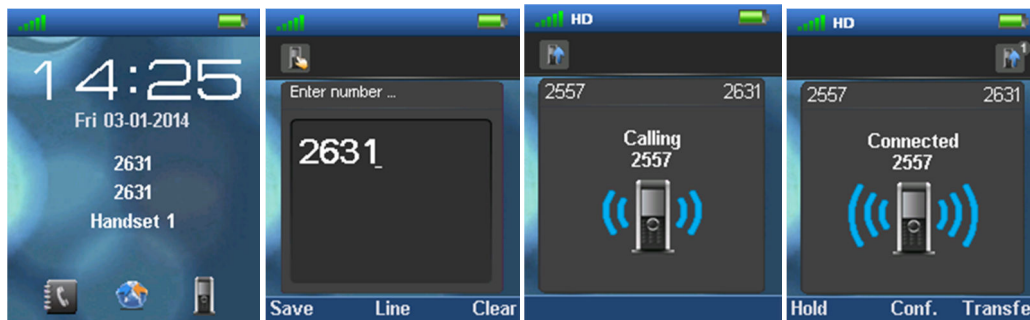

3. The handset will show a “Calling” screen as seen above.
4. When the counterpart answers the call the screen will show “Connected”, and the two parts are now in call.

### **7.2.1.1 Line Call**

If the handset is used in a multiline environment, it is possible to make a call from different lines by pressing the middle softkey “Line”, and choose the line according to which system the call should be made from. See 7.5.6 *Handset Name, Line, Reset Settings, Status*.

NOTE: To see additional information on the “Line” function, please check the base system document via [1].

### **7.2.2 Initiating a Call from Contacts**

To initiate a call from the contact list, there has to be contacts added to the local phonebook. When this prerequisite is met a local contact can be called by highlighting the contact in the contact list, and then pressing the left softkey “Call”, or pressing the green “Off-hook” button.

NOTE: The list of local contacts can be reached from the menu “Contacts” or directly from idle by pressing the left softkey when in idle.

### **7.2.3 Initiating a Call from Calls**

The number of an outgoing, incoming or missed call can be called directly from the call list by highlighting the number and pressing the left softkey “Call” or the green “Off-hook” button to call the entry.

NOTE: The “Calls” list can be reached from the menu “Calls” or directly from idle by pressing either the green “Off-hook” button or the right softkey when in idle.

### **7.2.4 Initiating a Call from the Central Directory**


When opening the “Central directory” a call can be made to a specific contact by searching for this contact, and thereby enter the list from which a contact can be called by pressing the green “Off-hook” key.

If different numbers are assigned to one contact a green arrow is showed to the right of the contact, and the right/left navigation keys can be used to choose which number that should be called.

NOTE: The “Central Directory” can be reached both from the menu “Central Directory” or directly from the idle by pressing the middle softkey when in idle.

## 7.3 Call Holding/Retrieving

It is possible to hold a call which means that the one party of the call is put on hold and cannot hear the other party, but can only hear a repeated short tone on hold until the call is retrieved.

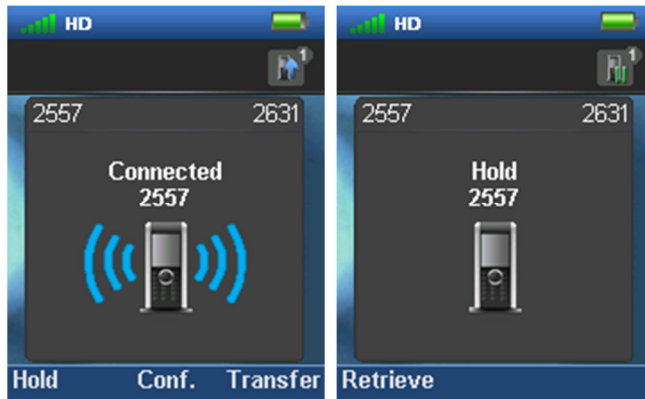

1. To put the counterpart of the call on hold press the left softkey “Hold”, and this party is put on hold.
2. To retrieve the call, and thereby continue the conversation, press left softkey “Retrieve” which is only showed on the screen when the other party of the call is put on hold.

**NOTE 1:** If one call is active and another call is on hold, then the active call will be terminated when pressing the red “On-hook” button, and the handsets automatically returns to the call on hold, i.e. the call on hold is now active, and the user has to press the red “On-hook” button again to terminate this call.

**NOTE 2:** When the counterpart is put on hold it is also possible establish a second call and make a conference, swap or transfer which will be explained in the following sections.

## 7.4 Attended and Unattended Transfer of a Call

When in an ongoing call, it is possible for either party to transfer the call, either attended or unattended, to another handset.


### 7.4.1 Attended Transfer

In an attended transfer the party that call is transferred to, is called before the transfer is made. The procedure to do this is as follows.

1. Initiate a call with a counterpart, so that the handset displays “Connected” as shown below.



2. Press the right softkey “Transfer” on either of the handsets in call, and the counterpart of the call is put on hold.
3. Enter the number that the transfer should be made to, and press the green “Off-hook” button

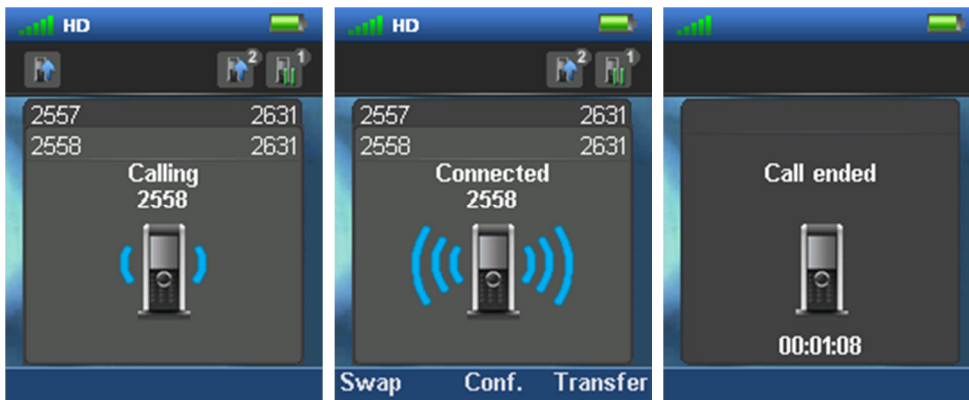


4. A ring back tone is heard and a third party is called.
5. As the third party answers the call the handset user initiating the transfer will show a connected screen as seen above.
  - **NOTE:** The original calling parties and the third party to whom the transfer has been made are displayed at the top of the active screen. Here, it is seen that it is the handset with number 2631 that is trying to make an attended transfer to the third party with number 2558.

- To make the transfer after the third party has answered the call, press the right softkey “Transfer”, and the call is transferred so that the second and third party are now in call, and a “Call ended” screen is displayed on the handset that initiated the transfer as seen above.

**NOTE:** It is also possible to make an attended transfer by pressing either the left softkey “Hold”, or the middle softkey “Conf.” instead of pressing the right softkey “Transfer” in step 2.

## 7.4.2 Unattended Transfer

When making an unattended transfer, the call will be transferred directly to a third party without the party initiating the transfer needing to call this third party before the transfer.

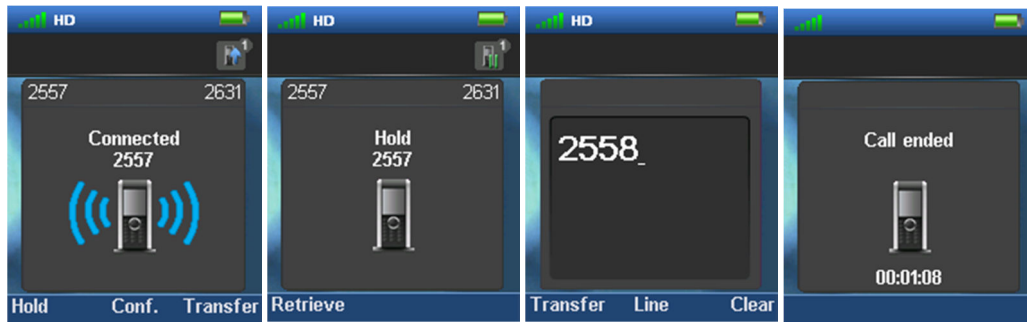

- Initiate a call with a counterpart so that the handset displays “Connected” as shown above.
- Press the right softkey “Transfer” on either of the handsets in call, and the counterpart of the call is put on hold.
- Enter the number that the transfer should be made to, and press transfer.
- This will end the call on the first handset party (screen showing “Call ended”), and the second party will stop being on hold and hear a ringback tone instead which indicates that this handset is now calling the third party.
- When the third party answers the call an unattended transfer has been made and the second and third party are now in call.

**NOTE:** As with attended transfer, it is also possible to make an unattended transfer by pressing either the left softkey “Hold”, or the middle softkey “Conf.” instead of pressing the right softkey “Transfer” in step 2.

## 7.5 Swap between Two Calls

It is possible to swap between two calls. In this case, one party will be in ongoing call, and the second party will be on hold. I.e. "Swap" means that it is possible to toggle between these two parties.




1. Initiate a call with a counterpart so that the handset displays "Connected" as shown above.
2. Put this call on hold by pressing the left softkey "Hold".
3. Enter the number of a second party, and press the green "Off-hook" button.
4. A ring back tone is now heard in the handset as the second party is alerting.



5. As the second party answers the call a blue "Connected" screen as above is displayed.
6. By pressing the left softkey "Swap" the green "Connected" screen is displayed instead which indicates that the ongoing call is now between the first party whereas the second party is now put on hold.
7. From this point, it is possible to toggle between the two parties by pressing "Swap". For each time that "Swap" is pressed a toggle is made between the two external parties, and the "Connected" screen shows either blue or green signal lines to indicate if it is the first or second call that is ongoing.

## 7.6 Call Waiting


When two parties are in call it is possible to receive a call waiting on one of the handsets which means that a third party calls one of the two parties already in call. During a call waiting two short beeps are heard every three seconds in the handset receiving the call waiting, and the following screen is displayed:

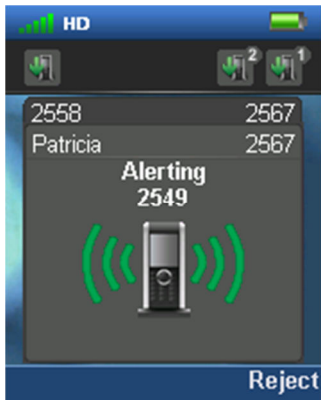

In this case it is seen that the ongoing call is with party 2558 whereas the call waiting is from party 2549 (that is called Patricia in the local phonebook).

It is possible to reject the call waiting with the right softkey "Reject", and hereby continuing the ongoing call with party 2558.

If the call party wants to answer the call waiting the green off-hook key should be pressed, and the following screen is displayed:

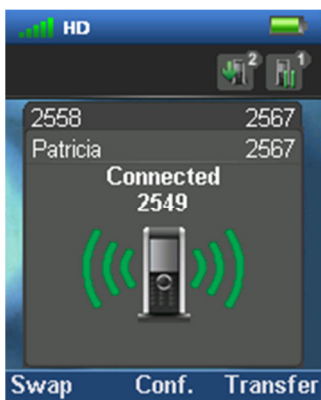

This indicates that the party 2567 now has two ongoing calls with one of them on hold, and it is possible to swap between them, make a conference, or transfer one of the parties.




## 7.7 Conference Call


In a conference call there are always at least three parties in the same conversation. Hereby, this feature enables the user to have an ongoing call with more than one person – the parties in a conference call are called participants.

### 7.7.1 Establishing a Conference Call

In the following, it is described how to establish a conference call between three parties.



1. Initiate a call with a counterpart so that the handset displays “Connected” as shown above.
2. Press the middle softkey “Conf.” to start a conference call.
3. The second party is put on hold and will hear a tone on hold.
4. Enter the number of the party to invite to the conference and press the green “Off-hook” button  to call this participant.

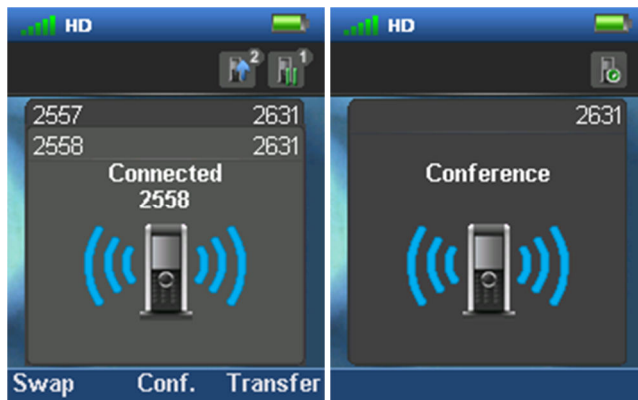

5. When the called party answers the call the second party is still on hold, and the conversation is only between the third party and the first party, i.e. initiator of the conference.
6. To start conversation between the three parties – i.e. a conference – press the middle softkey “Conf.”
7. The “Conference” screen as seen above will then be displayed, and the three participants will be in a conference call. Thereby the conversation is between all three parties.

**NOTE 1:** It is possible to invite more participants to the conference by repeating the steps 2. – 6. for one of the participants in the conference that has not yet invited a party to the conference. Once a


participant has invited a new party to the conference it is not possible for this participant to invite new parties to the conference.

**NOTE 2:** The maximal amount of participants to participate in a conference call is set according to the number of bases in a system. On a system with two bases it should be possible to have 10 participants in a conference call.


## 7.7.2 Terminating a Conference Call

When a conference call is terminated it is dependent of which participant that terminates it, if the whole conference is terminated, or if the conference is ongoing between the two participants left in the conference.

### Option 1

1. The user who has started the conference presses the red “On-hook” key  to terminate the conference call.
2. The whole conference is terminated, and none of the participants continue to be in call.

### Option 2

1. One of the participants that have been invited to the conference presses the red “On-hook” key  to terminate the conference call.
2. The call is only terminated for the participant that terminated the call
3. There is still an ongoing call between the initiator of conference, and the participant that have not ended the call.

**NOTE:** Different configurations on the PBX that the base system uses may result in different terminations of a conference call. E.g. the configuration of some PBX's could mean that the whole conference call is not terminated if the initiator of the conference presses the red “On-hook” key to terminate.

---

## 8 Accessories

It may be possible to get different accessories to the Fijowave 310 Handset. These different accessories are listed in the following:

- Dual Charger
- Single Charger
- Adapter for Charger
- Vertical Leather Pouch
- Horizontal Leather Pouch
- Belt Clip
- Swivel Belt Clip
- Battery
- Battery Cover

---

## 9 Troubleshooting

This troubleshooting section contains information on how to solve some operational problems that you may experience on the handset.

### 9.1 Operational problems

**State:** *The handset does not ring*

**Problem cause:** The sound off icon is seen in the status bar; hence the handset is silent mode.

**Action:** Increase the volume in Audio Settings, or long press the #-key in idle.

NOTE: If the Audio Settings is greyed out and cannot be changed, it is because the silent mode is enabled by long pressing the #-key. Please, long press the #-key in idle to disable this silent mode.

**State:** *The handset does not respond when pressing on the keys*

**Problem cause:** The keylock is enabled, and a "Press and hold \*" screen is displayed when pressing any key.

**Action:** Long press (press for more than 2 seconds) the \*-key.

**State:** *The handset shows "Searching" in the display*

**Problem cause:** The handset is out of the coverage area of the base station system.

**Action:** Please move the handset back in coverage of the base system.

**This product is in conformity with the essential requirements of the EC directive 1999/5/EC.**